

# WM SLIM SERIES – REPAIR GUIDE



## WM SLIM Series

# Table of Content

- [Replacing the tray light](#)
- [Replacing the flame light](#)
- [Replacing the flicker motor](#)
- [Replacing the heating element](#)
- [Replacing the PCB board](#)
- [Replacing the signal receiver](#)
- [Replac the touch control panel](#)

# Replacing the Tray Light



**Step 1** Push upward to take the front glass off.



## Step 2

Unscrew the two (2) screws each on both the left and right hand side to remove the back glass fixing bars.




### Step 3 Unscrew the screw on the right and left hand side



## Step 4


Unbuckle the touch control panel and take off the touch control panel assembly.

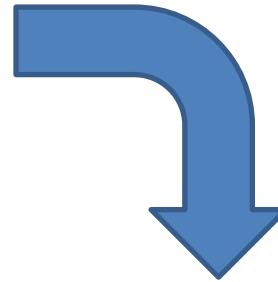



## Step 5

Remove the back glass

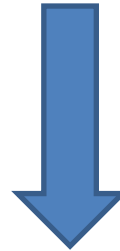



## Step 6 Remove the tray glass.






## Step 7


Unscrew the screws to disconnect the tray light assembly from the fireplace



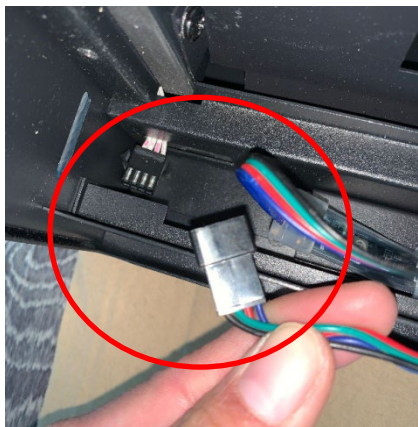

## Step 8

Unbuckle tray light to disconnect the tray light assembly from the fireplace, remove and replace.

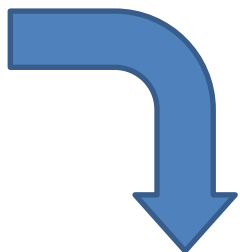

# Replacing the Flame Light


Follow STEPS 1 thru 5 in Replacing the Tray Light to arrive here.





## Step 1

Unscrew 2 screws on each on left and right hand side to remove the flame stencil.

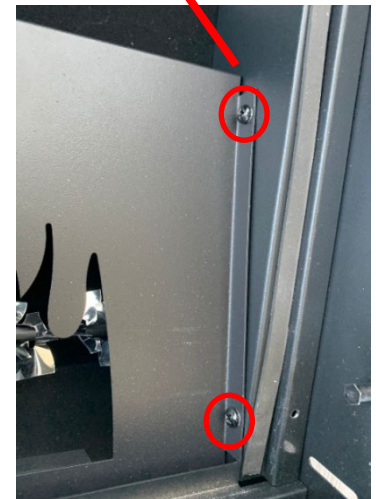



**Step 2** The flame light is located at the back of the flame stencil. Now you can replace it with a new flame light.



# Replacing the Flicker Motor

Follow STEPS 1 thru 5 in Replacing the Tray Light to arrive here.








## Step 1


Unscrew 2 screws each on left and right hand side to take off the flame stencil.

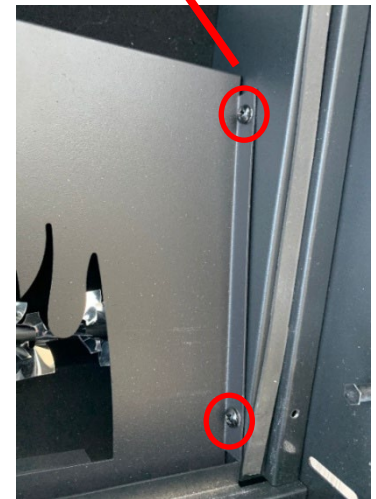




The flicker motor is situated here


# Step 2

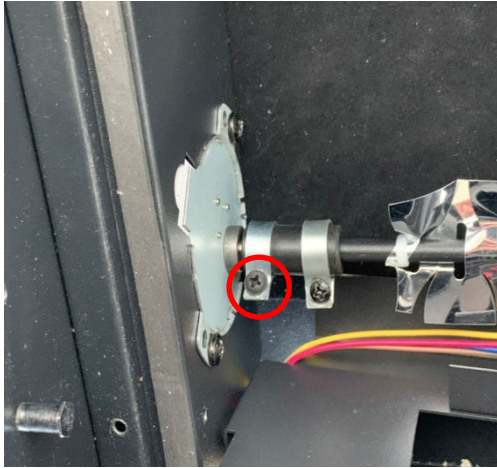



Unscrew the screw

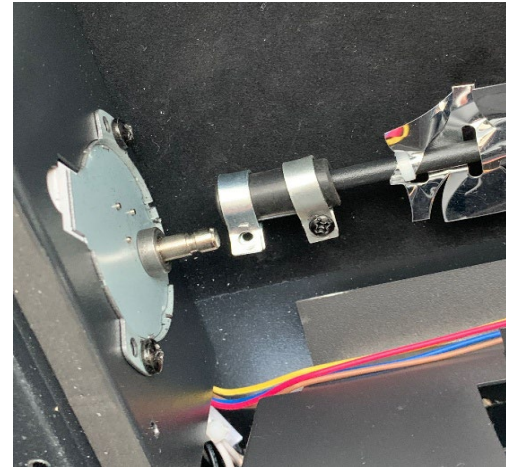

Disconnect the motor from the rod

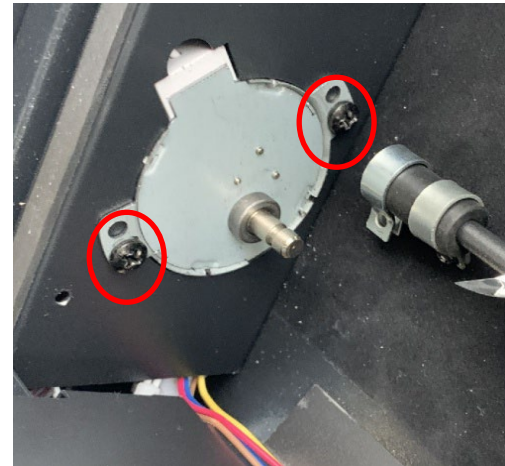

Unscrew the screws to remove the motor

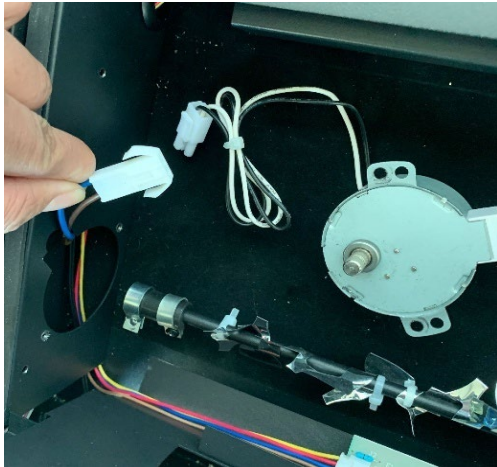 

Pull out the wiring and unplug the motor

# Replacing the Heat Assembly

Follow STEPS 1 thru 5 in Replacing the Tray Light, you come to here.






**Step 1** Unscrew the screws to disconnect the heat assembly from the fireplace




When the screws are removed the heat assembly can be detached

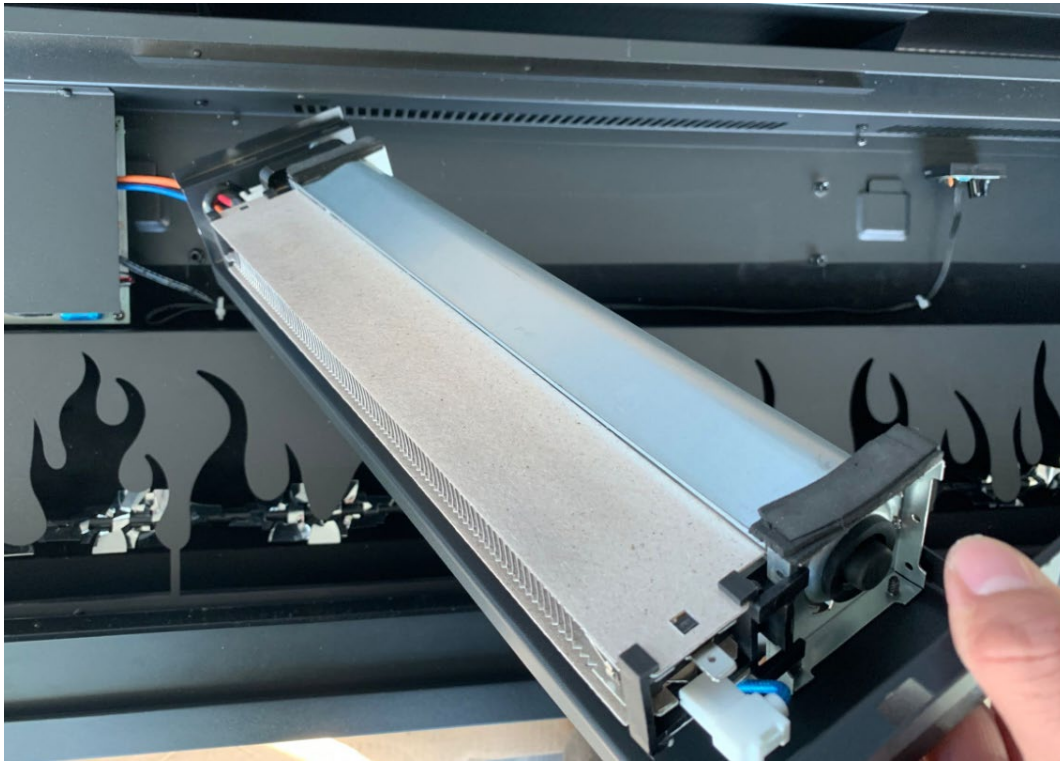




**Step 2** Unscrew the screws to disconnect the heater from the heat assembly. Unplug and replace.

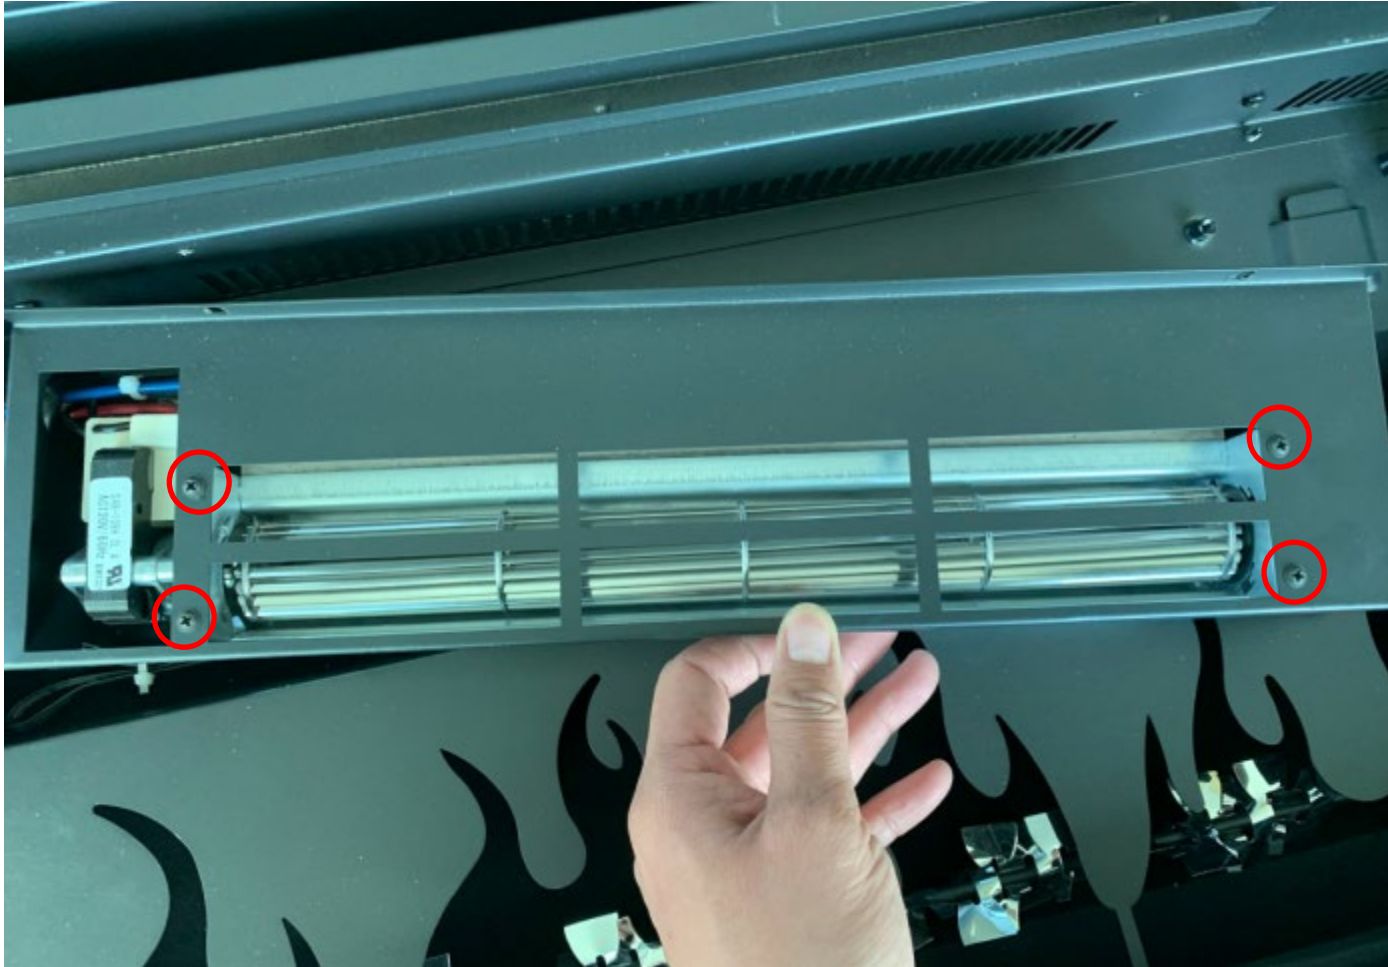

# Replacing the PCB board



Follow STEPS 1 thru 5 in Replacing the Tray Light to arrive here



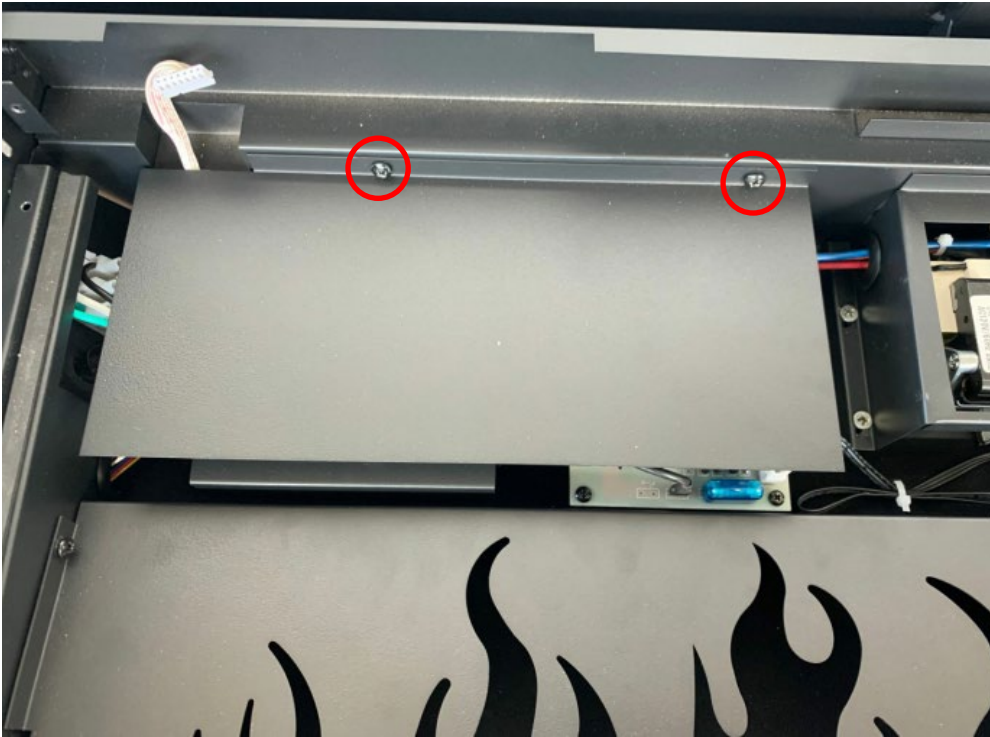


## Step 1

Remove the screws to take off the PCB board protection cover.

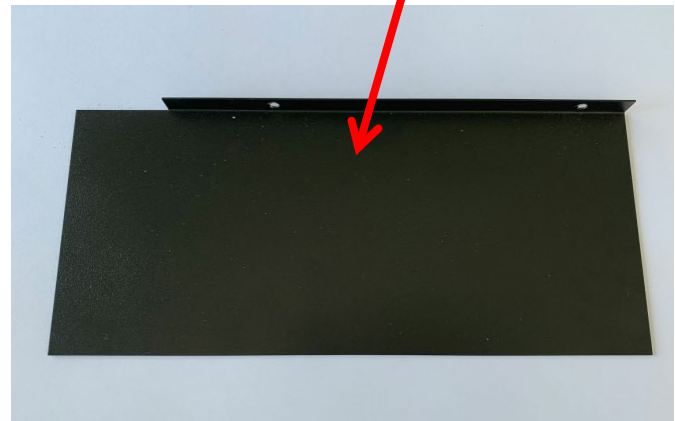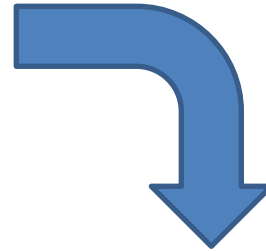

**Step 2** Unscrew the screws to take off the PCB board and replace with it a new one.

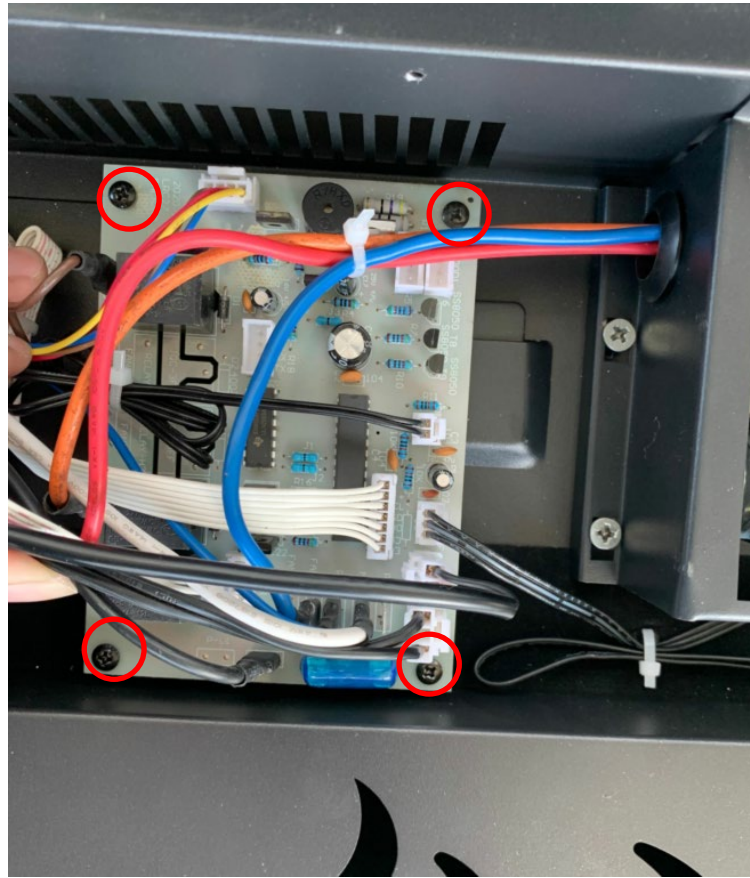


# Replacing the Signal Receiver

Follow STEPS 1 thru 5 in Replace the Tray Light to arrive here






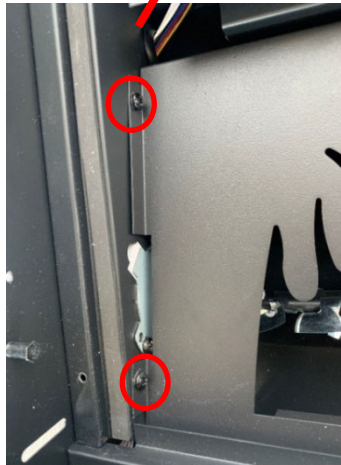


## Step 1

Unscrew 2 screws each on left and right side to take off the flame stencil.


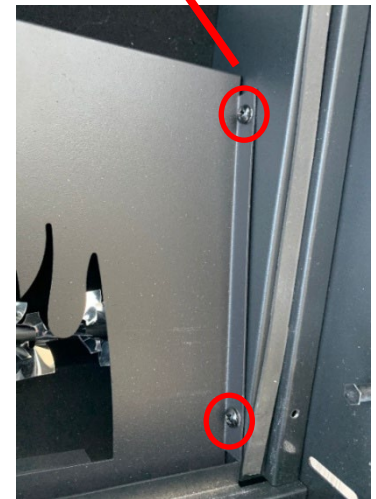





The signal receiver is situated here

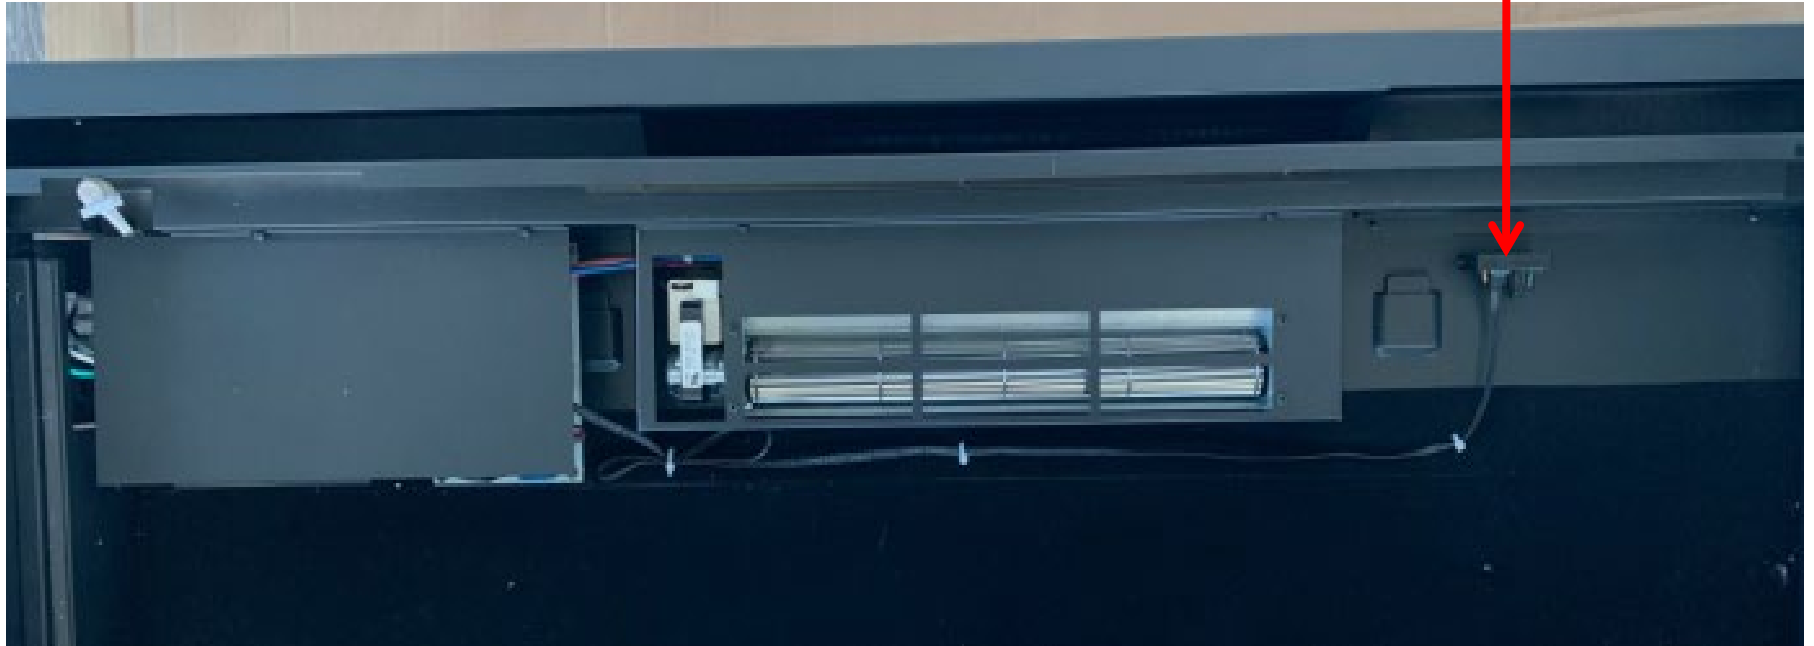

## Step 3

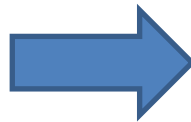
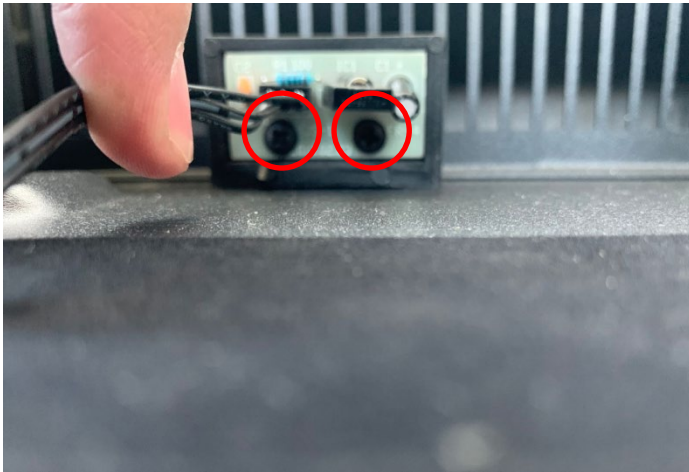


Remove the screws to take off the signal receiver.

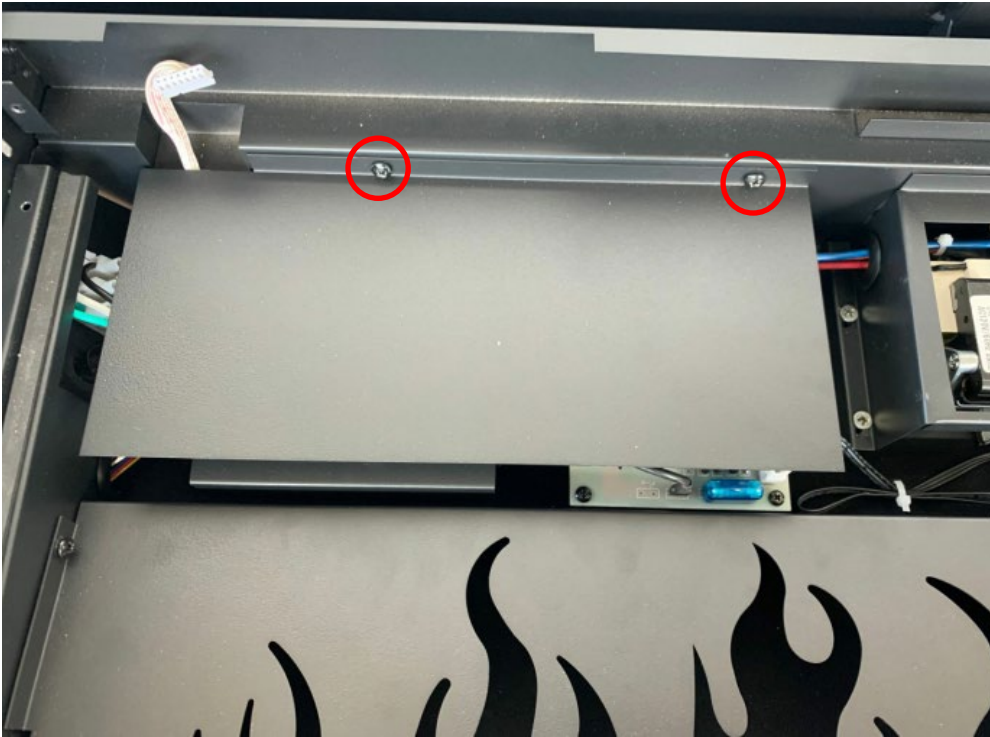


## Step 4

Unscrew the screws to take off the PCB board protection cover.

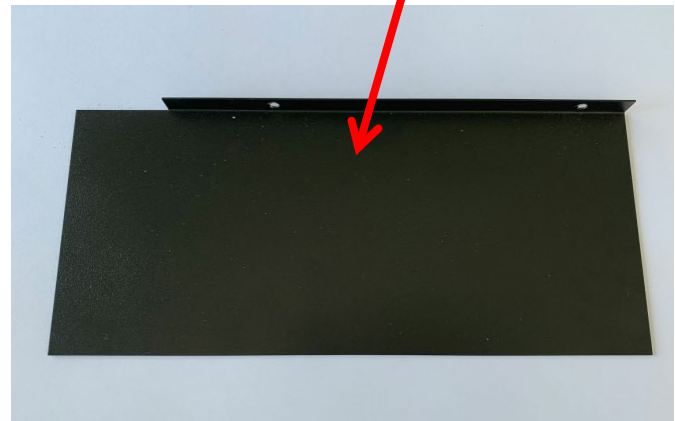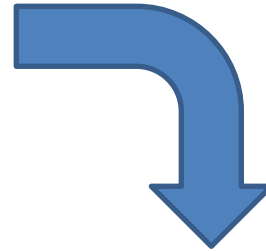

## Step 5 Unplug and replace with it a new signal receiver

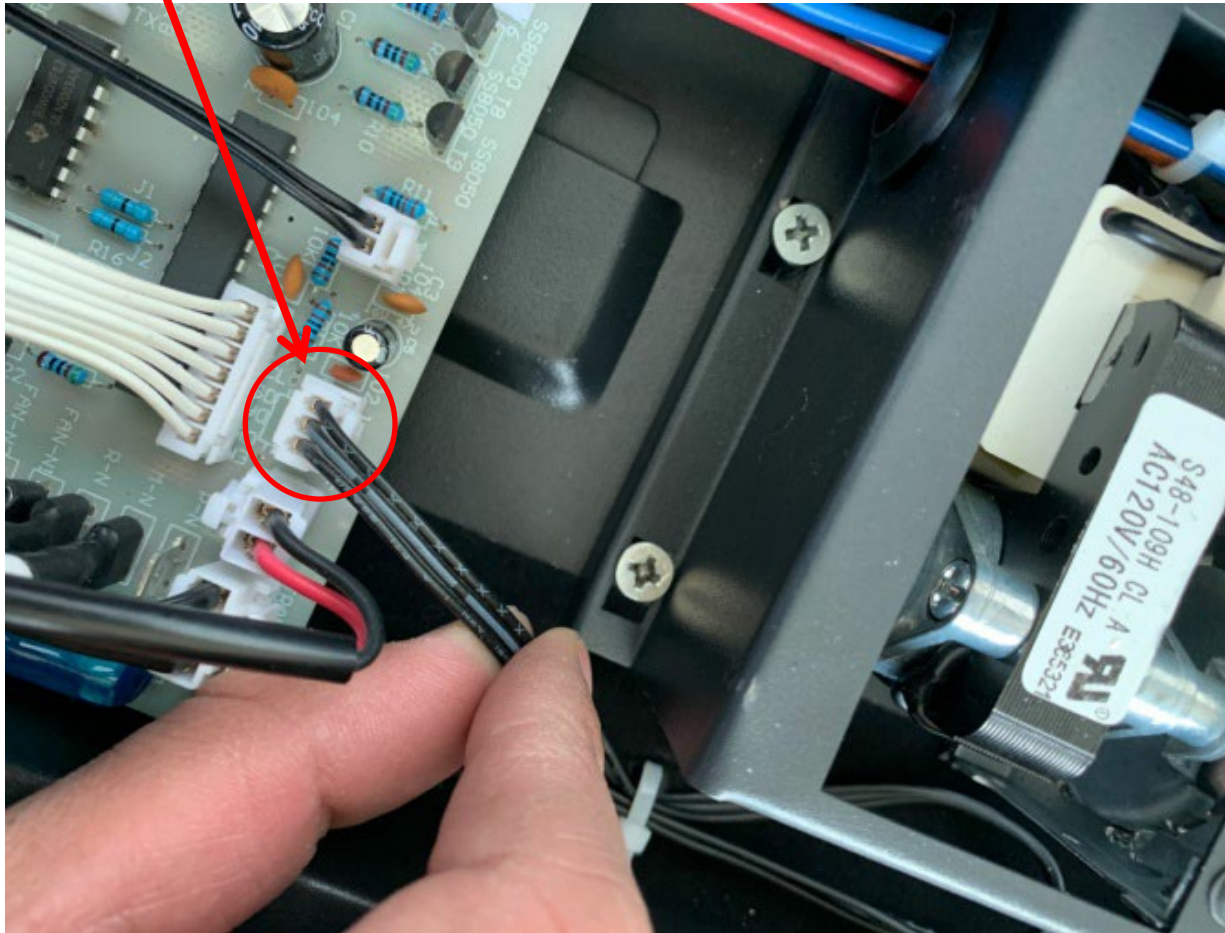

# Replacing the Touch Control Panel

Follow STEPS 1 thru 4 in Replacing the Tray Light to arrive here



Unscrew the screws to remove the touch panel to replace it with a new one